











What to do if...
What to do if...

	A tire punctures	P. 379	If you have a flat tire
	The engine does not start	P. 388	If the engine will not start
		P. 71	Engine immobilizer system
		P. 394	If the vehicle battery is discharged
	The shift lever cannot be moved out	P. 389	If the shift lever cannot be shifted from P
	The engine coolant temperature gauge enters the red zone	P. 397	If your vehicle overheats
	Steam can be seen coming from under the hood		
	The key is lost	P. 390	If you lose your keys
	The battery runs out	P. 394	If the vehicle battery is discharged
	The doors cannot be locked	P. 37	Doors
	The horn begins to sound	P. 73	Alarm
	The vehicle is stuck in mud or sand	P. 400	If the vehicle becomes stuck



A warning light or indicator light comes on

P. 355

If a warning light turns on or a warning buzzer sounds...



nWarning lights



Brake system warning light

or



P. 355



Malfunction indicator lamp

or



P. 356



"ABS" warning light

or



P. 356



Driver's seat belt reminder light

P. 358



Front passenger's seat belt reminder light

P. 358



Low fuel level warning light

P. 358



Master warning light

P. 358



SRS warning light

P. 356



Electric power steering warning light

P. 356



Open door warning light

P. 358



Pre-collision system warning light

P. 356



Charging system warning light

P. 356



Tire pressure warning light

P. 358



Automatic transmission fluid temperature warning light

P. 358



A warning message is displayed

P. 365

If a warning message is displayed